



**Kawasaki ZX-6R 2005-2006**  
**Kawasaki ZX-6RR 2005-2006**

**QS4 USB (Stand-alone quickshift) Installation Instructions**  
Part #'s Q444S, Q444R


In order to fit the Bazzaz reverse quickshift on this application, aftermarket rearsets must be used



**Parts List:**

- QS4 Control Unit
  - QS4 Harness
  - Shift Switch & Mounting Hardware
  - Cable Ties
  - Velcro
  - USB Cable
  - Swingarm Stickers
- Download Z-Fi Mapper Software at [www.bazzaz.net](http://www.bazzaz.net)  
Software instructions available at [www.bazzaz.net](http://www.bazzaz.net)

# BAZZAZ HARNESS CONNECTOR IDENTIFICATION

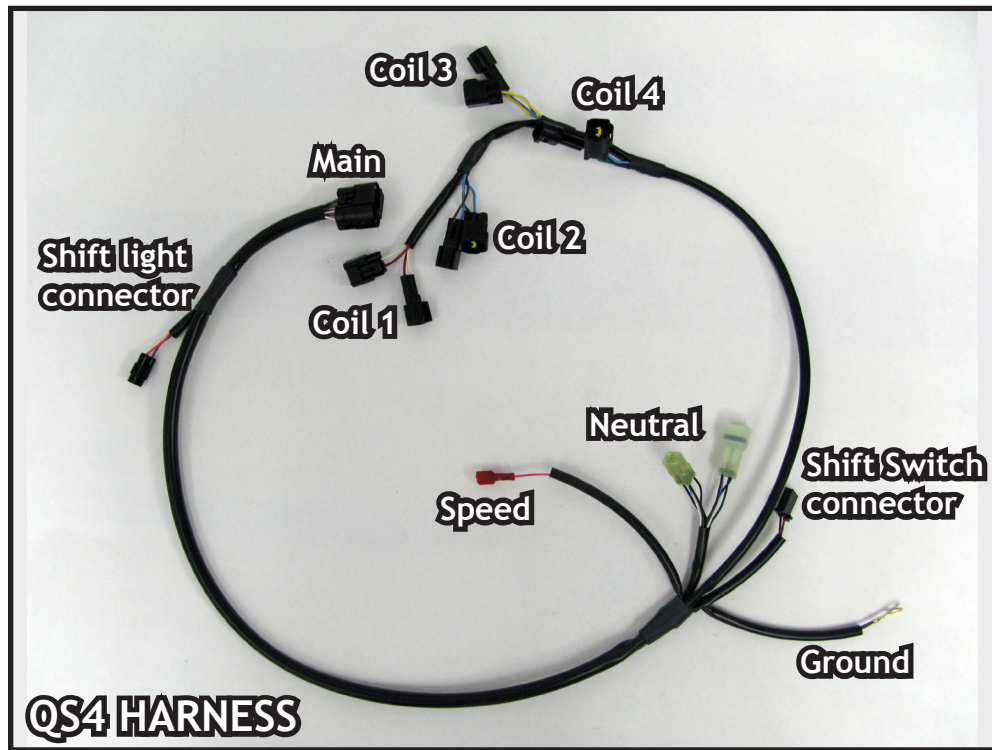


QS4 harness routing shown in yellow for later reference



Read through all instructions before beginning installation. This document is intended for use by qualified technicians. Refer to a factory service manual for more specific stock component identification and location information.


**WE STRONGLY SUGGEST THAT AN EXPERIENCED TECHNICIAN INSTALL THIS BAZZAZ PRODUCT**

1. Begin the installation by removing the seat, fuel tank, airbox and right side vanity panel.
2. Place and secure the **CONTROL UNIT** to the inside front section of the right side fairing using the provided Velcro.

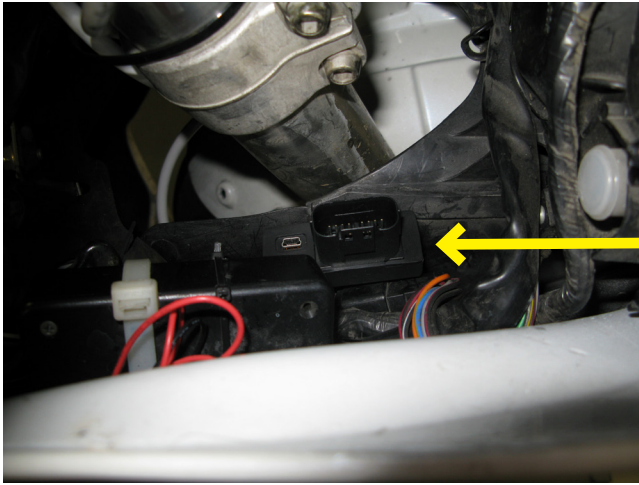

□ QS4 control unit


3. Plug the main connector of the **QS4 HARNESS** into the control unit. Begin routing the harness back towards the clutch cover between the frame and fairing; then into the engine compartment between the frame and the clutch cover.
4. Locate the black factory neutral connectors, found on the right side of the engine compartment. Disconnect the factory connectors and connect the Bazzaz **NEUTRAL** connectors inline with the factory connectors.

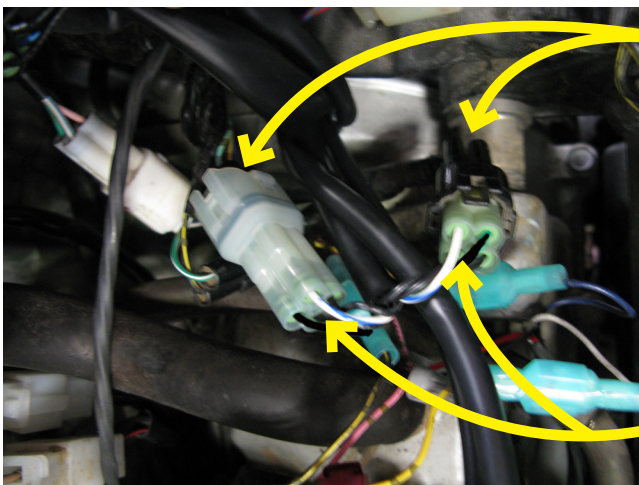


□ Factory neutral connectors

□ Bazzaz neutral connectors


5. Locate the factory speed sensor connector, which is found on top of the transmission toward the left side of the engine compartment. Disconnect the factory connector from the sensor and trim the sheathing back to expose the wires. Crimp a supplied scotchlok on the exposed yellow wire of the connector. Insert the Bazzaz **SPEED** connector into the scotchlok and reconnect the factory speed connector.

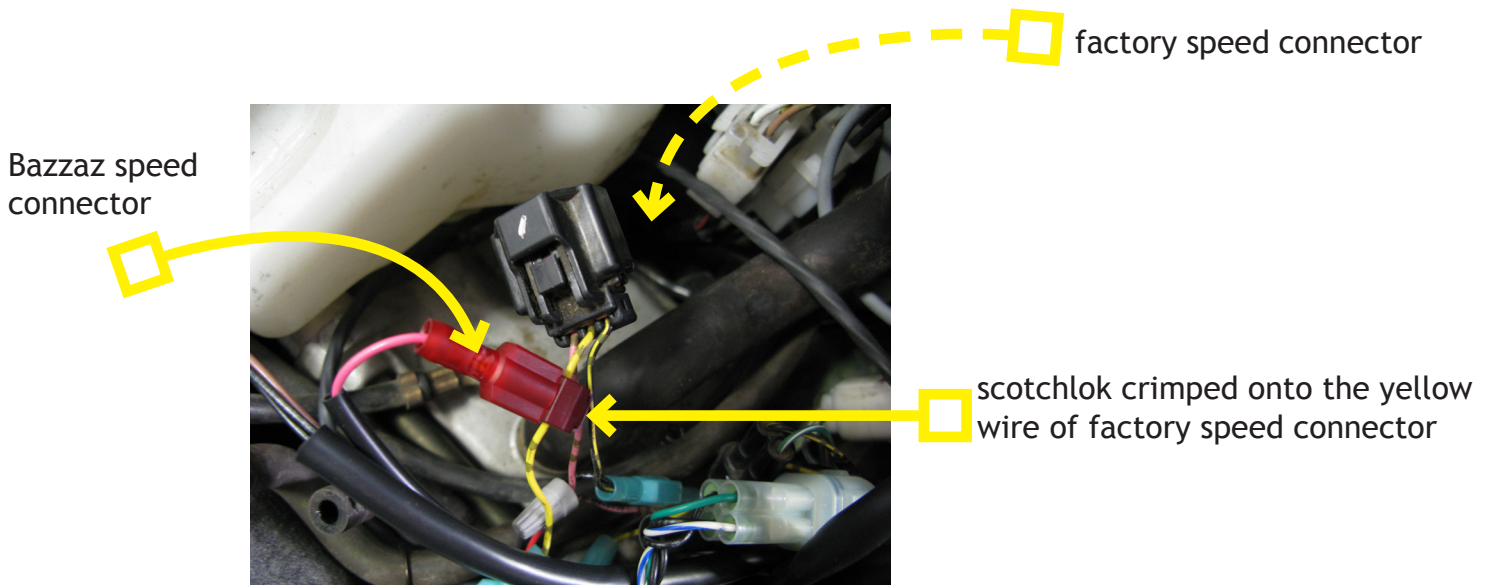


6. Next attach the Bazzaz **GROUND** lug to a suitable chasis ground.

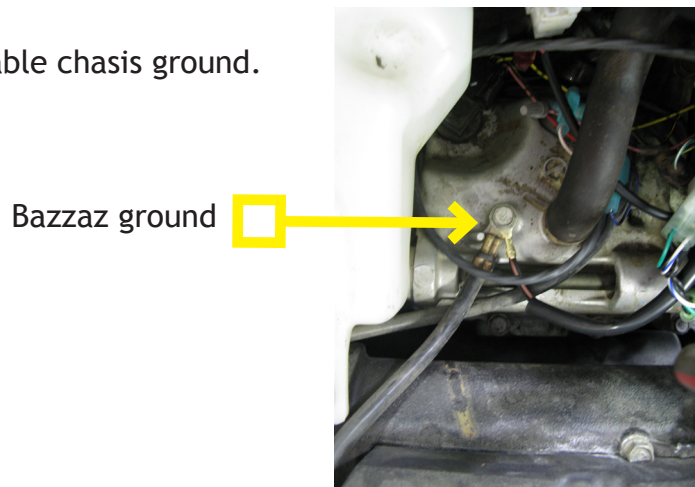

7. From **right to left**, unplug the factory coil connectors from the stick coils. Plug the Bazzaz **COIL CONNECTORS** inline between the factory connectors and stick coils. **Start with the Bazzaz coil connectors having the green wires.**

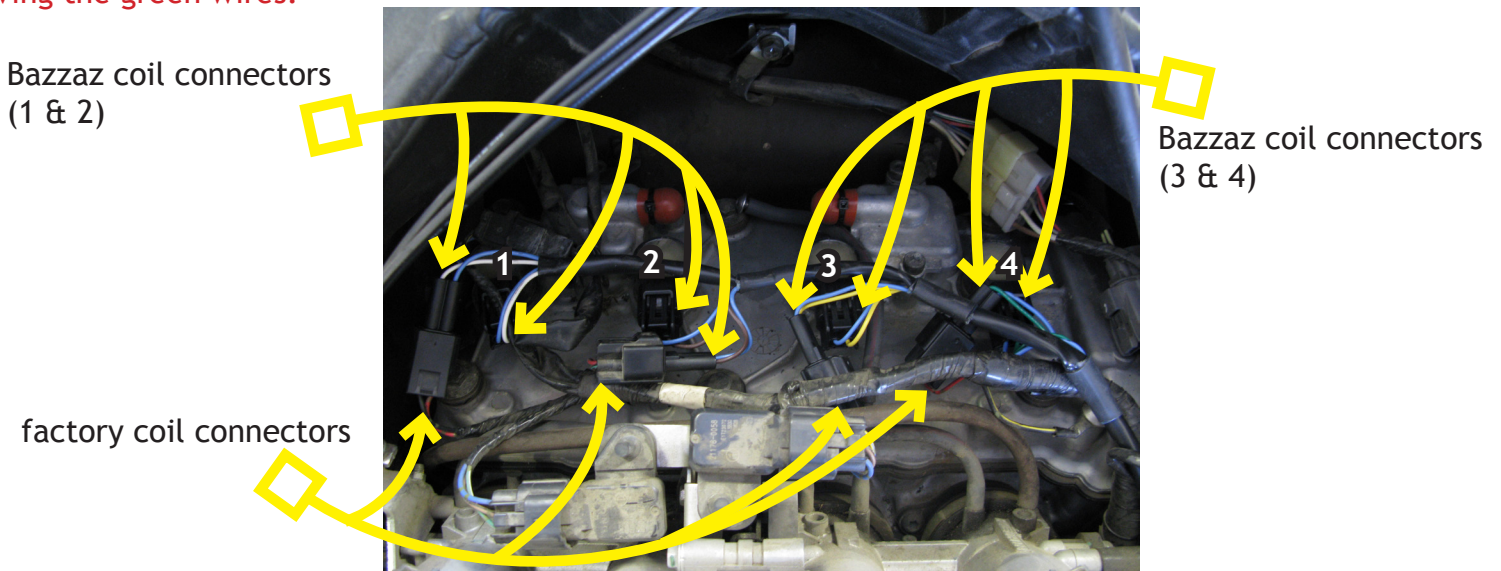

8. Now you will begin the installation of the **SHIFT SWITCH** by removing the factory shift rod. Next install the Bazzaz shift switch onto the front linkage; then install the supplied **SHIFT ROD** between the rear linkage and the shift switch. Adjust the foot pedal to preferred height and secure components by tightening the 10mm nuts. Now route the shift switch connector up to the engine compartment and connect it to the mating connector on the Bazzaz coil harness.

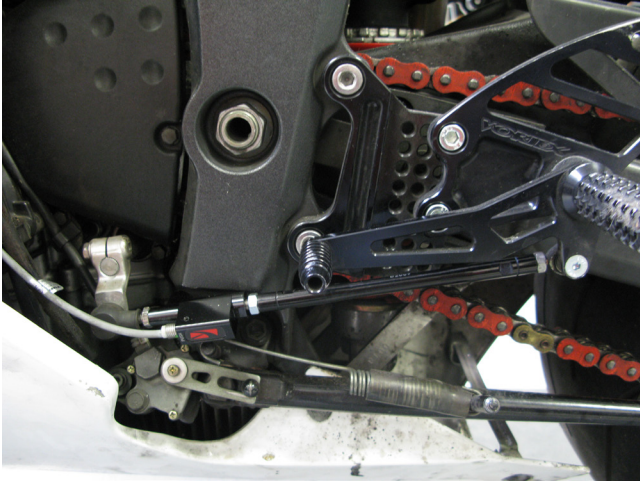

*Standard shift installation shown  
Reverse shift requires modification to shift linkage*

9. To complete the installation, use the supplied cable ties to secure the harness neatly along the routing path free of any moving or hot components (which could cause damage or failure of the system). If any problem is found, please carefully follow through the installation steps again. If problem still persists, please call **Bazzaz tech support at (909) 597-8300**. After it is determined that everything is correct, reinstall the components removed in step one and the installation will be complete.

Don't forget to download the Z-Fi Mapper software from [www.bazzaz.net](http://www.bazzaz.net) (under the software tab) so that you can adjust your gear dependent kill times, if necessary. Also, if using the QS4 shift light (sold separately), you can adjust your shift points (at what RPM the shift light comes on).



QS4 USB Shift Light (for use with QS4 USB only).  
[Part No. M841]

