



## INTEGRATING Z BOMB WITH OTHER BAZZAZ PRODUCTS




The fuel, quick shift, and/or traction control products need to read the *unchanged gear or throttle information* to function properly, depending on make of bike.

Therefore, the **Z-Bomb**, which will change that information, needs to be plugged in-line **after** the other Bazzaz product(s). See illustrations.



### SUZUKI Z-BOMB INSTALLATION

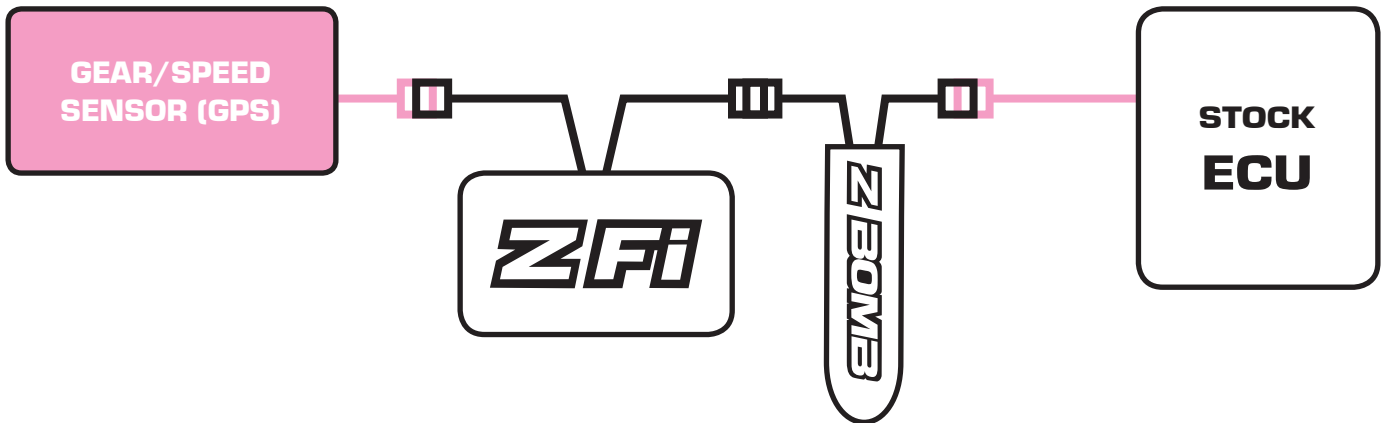

### HONDA Z-BOMB INSTALLATION

