

PROBLEM:
TC
NOT WORKING

Bike Running

YES

Connect to Z-Mapper software.



Check all TC Settings.
10 in Sensitivity
10 in Cut Level
0 in Gear Trim

YES

TPS Reading Correctly

NO

Check Wiring

Indicates problem with TPS signal wire/connection. See wiring diagram for identification.



YES

In neutral, check that the RPM signal reads correctly.



RPM reading correctly

NO

Check Wiring

Indicates problem with CKPS signal wire/connection. See wiring diagram for identification.



YES

Gear reading correctly (stable)

NO

Check Wiring

YES



YES

