

**PROBLEM:  
Z AFM  
NOT WORKING**

ZAFM + Plugged In (installed correctly)

**Key on Red  
Diag Light**

**YES**

**NO**

**Check your  
connections**

Bike Running

Red light should go out

Yellow light (heater [HTR] )  
should be solid on

**Yellow light  
should start  
blinking rapidly  
after 90 seconds**

**YES**

**NO**

**Reset the  
Z AFM**

Reset by unplugging  
the white connector  
then reconnect

**Z AFM  
Working**

In the software readings for RPM and  
TPS should be as follows:

RPM (Stable above 3,000 RPM)

TPS (Stable at 5% and above)

Gear (Stable)