

# INSTALLATION INSTRUCTIONS



# UNLEASH.

THE SMARTEST PERFORMANCE TUNING TECHNOLOGY

**QS4/USB** STANDALONE QUICK SHIFT

**KAWASAKI ZX10R | 2016**  
**Q4414**

## 1 > READ

### WARNINGS > INSTALLING



- We strongly suggest that an experienced technician install this product.
- Read through all instructions before beginning installation.
- This document is intended for use by qualified technicians.
- This is not a replacement for the factory Engine Control Unit (ECU).
- Refer to a factory service manual for more specific stock component identification/location information and removal/assembly procedures.

### WARNINGS > USING



- Use only in race or other closed-course applications and never on public roads.
- Z-Fi products are not certified by the California Air Resource Board (CARB) for use on CA highways.

### GETTING HELP



- Factory support is available in the US at 909-597-8300.
- For fastest support outside of the US, find your local importer at [bazzaz.net](http://bazzaz.net).


# 2>IDENTIFY

## INCLUDED PARTS

1. QS4-USB control unit
2. QS4-USB harness
3. Shift Switch and mounting hardware
4. USB cable
5. Swingarm stickers
6. Download Bazzaz software from [bazzaz.net/index.php/software-overview](http://bazzaz.net/index.php/software-overview)

## QS4 HARNESS

1. Main
2. Shift Switch
3. Ground
4. +12v Switch Power
5. GPS
6. Coils


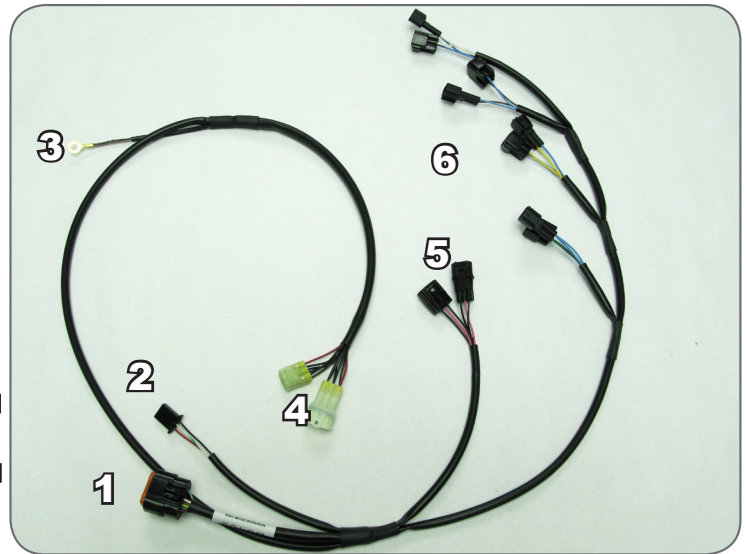


# 3>REMOVE

1. Rider and passenger seat
2. Fuel tank
3. Air box

# 4>SECURE


1. Remove the factory GPS/shift switch bracket.
2. The Bazzaz control unit will be secured beneath the throttle bodies above the black rubber mat.
3. Once the unit is fitted install the bracket to its proper location.

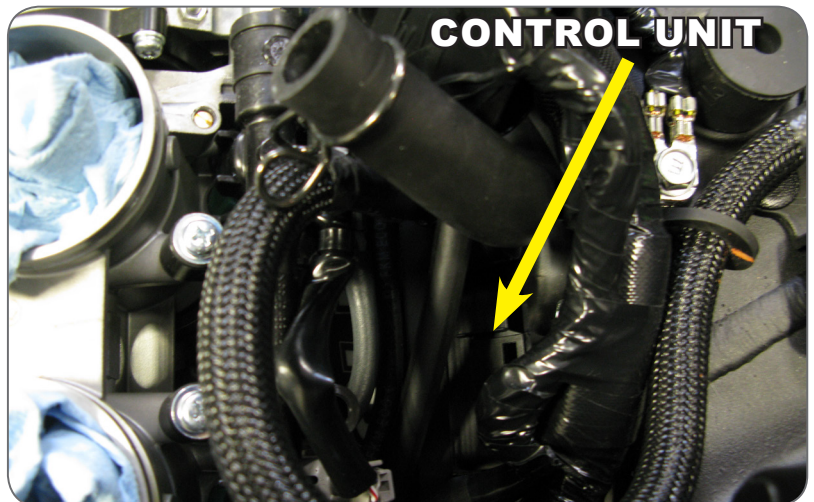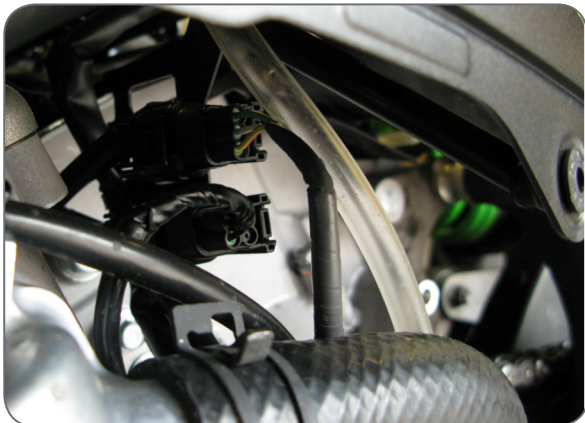

# 5>CONNECT


## 5.1

1. Connect the Bazzaz QS4 harness to the control unit and begin routing the harness as shown below.

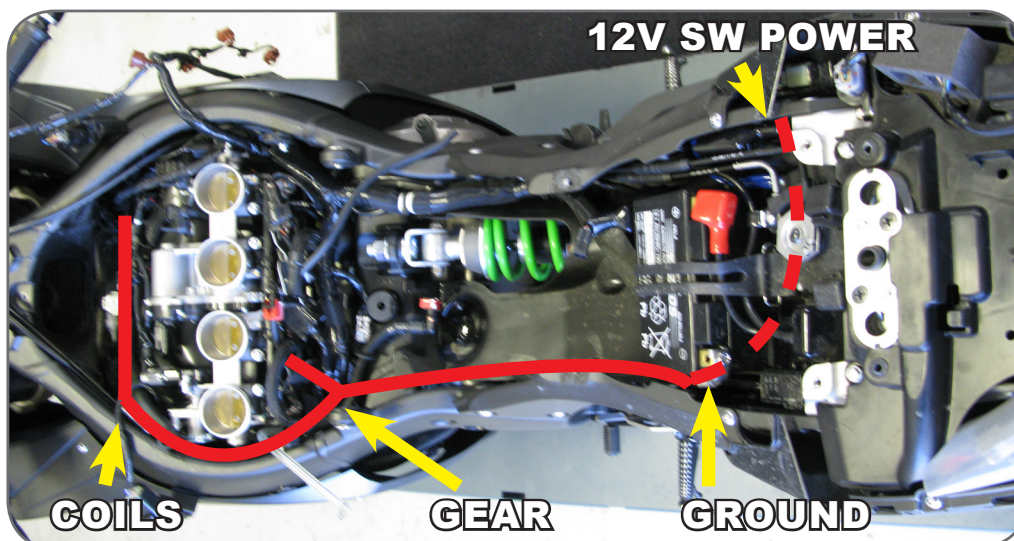


## 5.2

1. Locate the factory black three pin GPS connector, which can be found on the bracket that was removed for the control unit installation.
2. Disconnect the factory GPS connectors and install the Bazzaz GPS connectors inline

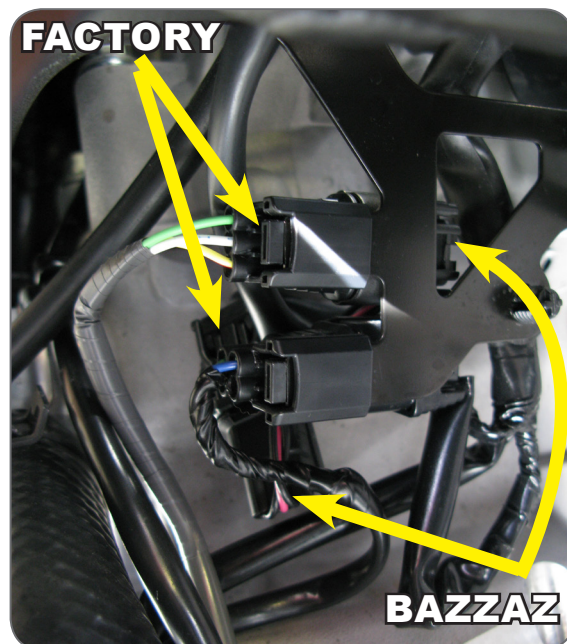

## 5.3


1. Locate the Bazzaz ground lug and install the Bazzaz onto the negative ground post of the battery.

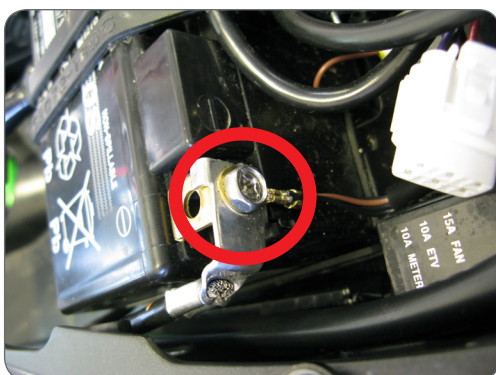

# 5>CONNECT (CONT.)


## 5.4

1. Locate the factory six pin diagnostic connector, which can be found mounted within a grey foam block on the right hand side of the bike in the tail section.
2. Disconnect the factory connectors and install the Bazzaz inline.

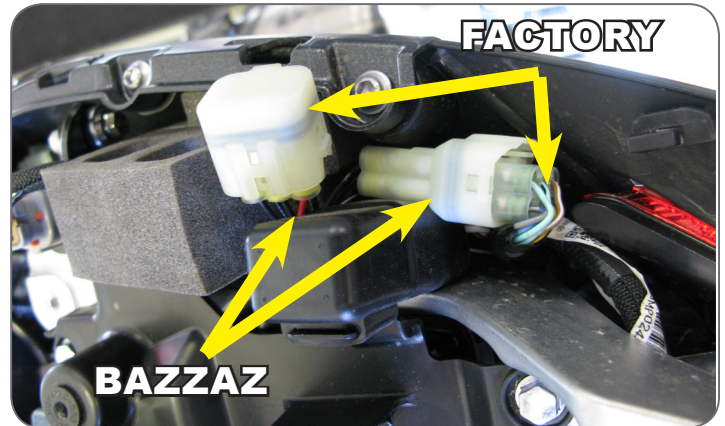


## 5.5

1. Locate the factory coil connectors and begin to install the Bazzaz coil connectors inline working from left to right.

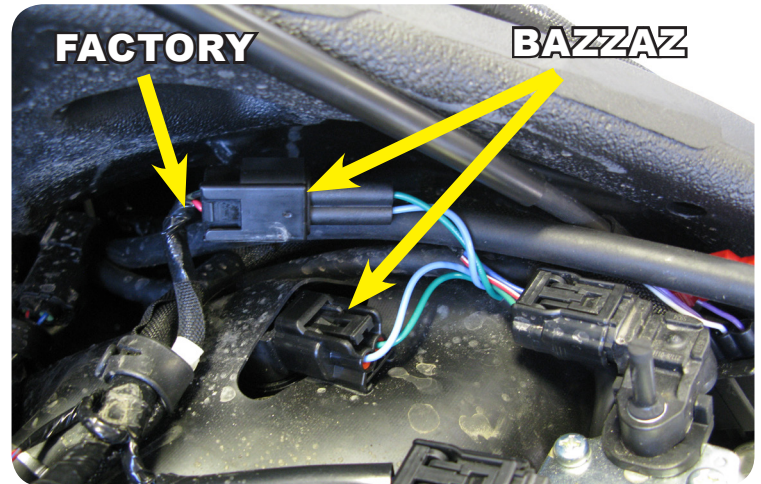

# 6>QUICKSHIFT

1. Measure and note your shift pedal height so you may reposition the shift lever once complete.
2. Remove the factory shift rod and begin to install the Bazzaz shift switch using one of the supplied allen stud bolts and tighten.
3. Begin to install the Bazzaz shift rod. \*The shift rod may need to be cut to get your original shift pedal height.\*
4. Ensure to retighten all lock nuts on the shift linkage.
5. Once the shift switch is installed, locate the Bazzaz quickshift eliminator and install into the factory quickshift connector.

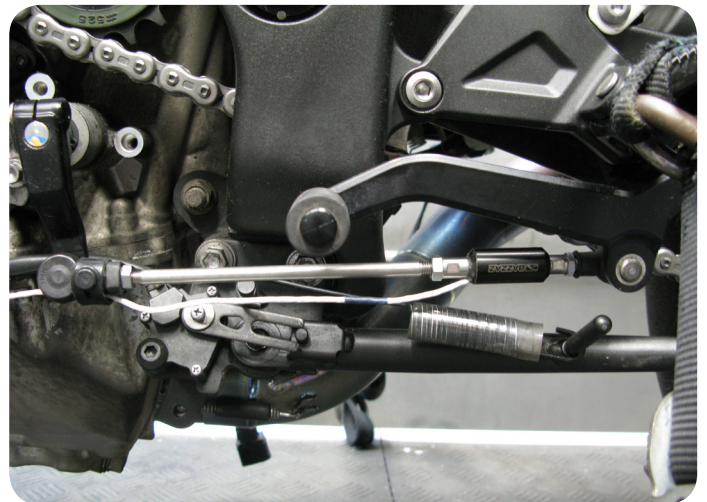

# 7>SECURE



Use the supplied cable ties to secure the harness neatly along the routing path **free of any moving or hot components** (which could cause damage or failure of the system).

# 8>CHECK



1. In order to check that the system is installed correctly, download the Bazzaz Z-Fi Mapper software at [bazzaz.net](http://bazzaz.net).
2. Plug the USB cable into the control unit and computer.
3. Locate and open the Z-Fi Mapper software.
4. Check that the pre-programmed map matches the model of your bike on the fuel map page within the software. You can switch from map 1 to map 2 by unplugging the map select jumper on the Bazzaz fuel harness. Map 1 will be pre-programmed; depending on your model, there may be a pre-programmed map in the map 2 slot. If map 2 is blank, stock ECU settings are used. Make sure that the jumper is left plugged in or unplugged, depending on which map you choose.
5. Start the vehicle and begin to check that the following inputs read correctly on the fuel map page.
  - RPM - Make sure that the RPM is reading near what the vehicle is idling at.
  - GPS - The vehicle should read neutral (or whichever gear it is in). For motorcycles that use a Gear Position Sensor, the bike does not need to be running to do this. For motorcycles that use a speed sensor, the wheel must be spinning to read gear properly. This can be checked on a dynamometer or by using a rear stand. Use caution when testing componentry.
  - TPS - When throttle is applied, the TPS should read accordingly. Fly-by-wire models must be running to check TPS. Normal cable operated throttles can be checked with just the key on, not running.

### Also use software to:

- View and/or make adjustments to fuel maps
- Activate Z-AFM self mapper (sold separately)
- Save and load new fuel maps
- Re-calibrate throttle position sensor after throttle modifications
- View diagnostics for troubleshooting
- Change quickshift settings
- Make traction control adjustments



If any problem is found, please carefully follow through the installation steps again.



If problem still persists, please contact Bazzaz tech support

- Factory support is available in the US at 909-597-8300.
- For fastest support outside of the US, find your local importer at [bazzaz.net](http://bazzaz.net)

## 9>REINSTALL

After it is determined that everything is correct, reinstall the components removed in step 3.

## 10>USE



**MAP 1**



**MAP 2**

## MAPS

The Bazzaz controller is capable of storing two maps.

Switch maps by connecting or disconnecting the map select jumper supplied with the kit.

Or use the optional handlebar-mounted switch to switch maps on the fly (sold separately).

# 11>NEXT LEVEL

\*\*Accessories purchased separately.

## SHIFT LIGHT

Illuminates white to identify pre-determined, optimal shift points.

Used to improve forward drive and momentum for faster drag passes and lap times.

Comes pre-programmed with suggested values that can be easily adjusted as desired.

\*For use with the QS4 USB stand-alone quick shift only.



**\$129.99**



**THE SMARTEST PERFORMANCE TUNING TECHNOLOGY**



Proudly made in the  
**United States**

**Q4414**