

INSTALLATION INSTRUCTIONS



UNLEASH.

THE SMARTEST PERFORMANCE TUNING TECHNOLOGY

QS4/USB STANDALONE QUICK SHIFT

**KAWASAKI ZRX1200 | 2009-2016
Q4417**

1 > READ

WARNINGS > INSTALLING



- We strongly suggest that an experienced technician install this product.
- Read through all instructions before beginning installation.
- This document is intended for use by qualified technicians.
- This is not a replacement for the factory Engine Control Unit (ECU).
- Refer to a factory service manual for more specific stock component identification/location information and removal/assembly procedures.

WARNINGS > USING



- Use only in race or other closed-course applications and never on public roads.
- Z-Fi products are not certified by the California Air Resource Board (CARB) for use on CA highways.

GETTING HELP



- Factory support is available in the US at 909-597-8300.
- For fastest support outside of the US, find your local importer at bazzaz.net.


2>IDENTIFY

INCLUDED PARTS

1. QS4-USB control unit
2. QS4-USB harness
3. Shift Switch and mounting hardware
4. USB cable
5. Swingarm stickers
6. Velcro
7. Download Bazzaz software from bazzaz.net/index.php/software-overview

QS4 HARNESS

1. Main
2. +12v Sw. Power
3. Neutral
4. Speed
5. Shift Switch
6. Ground
7. Coils

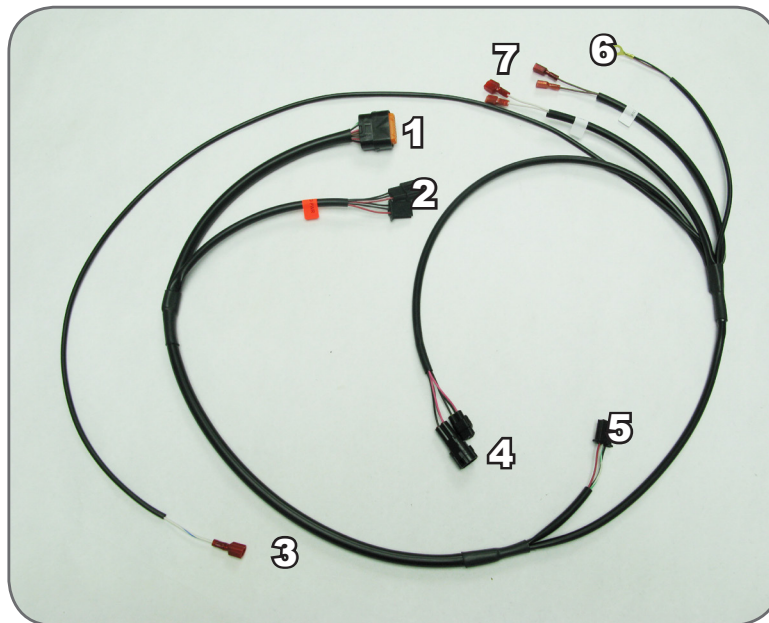

3>REMOVE

1. Rider seat.
2. Fuel tank.
3. Air box.


4>SECURE

1. Secure the Bazzaz control unit beneath the airbox on the right hand side above the valve cover.
2. Use the supplied large zip tie to secure the unit to the bracket holding the metal ABS lines.

5>CONNECT


5.1

1. Secure the Bazzaz control unit beneath the rider seat in the tail section of the bike.
2. Connect the Bazzaz QS4-USB harness to the control unit and begin routing the harness towards the factory coils, which can be found on the outside of the frame just above the outside throttle bodies.

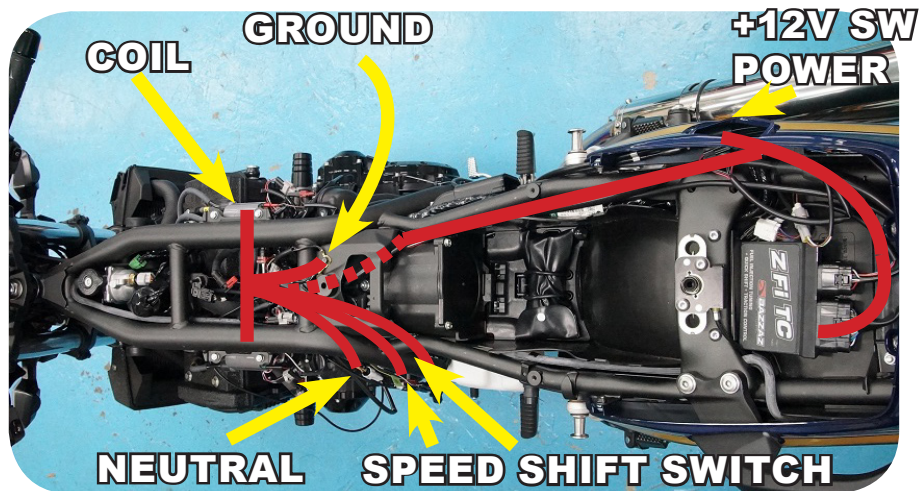

5.2

1. Locate the factory tail light connector which can be found on the right hand side of the bike in the tail section.
2. Disconnect the factory tail light connector and install the Bazzaz switched power connectors inline.

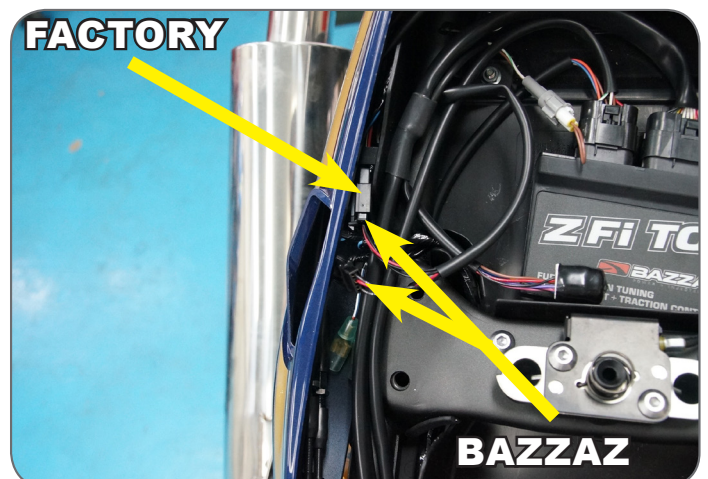

5>CONNECT (CONT.)


5.3

1. Locate the factory ground location and install the Bazzaz ground lug.




5.4

1. Locate the factory neutral connector which can be found on the left hand side of the bike below the front sprocket.
2. Pull the factory sheathing back from the connector and crimp onto the factory light green wire using the supplied scotchlok. Connect the Bazzaz neutral connector.

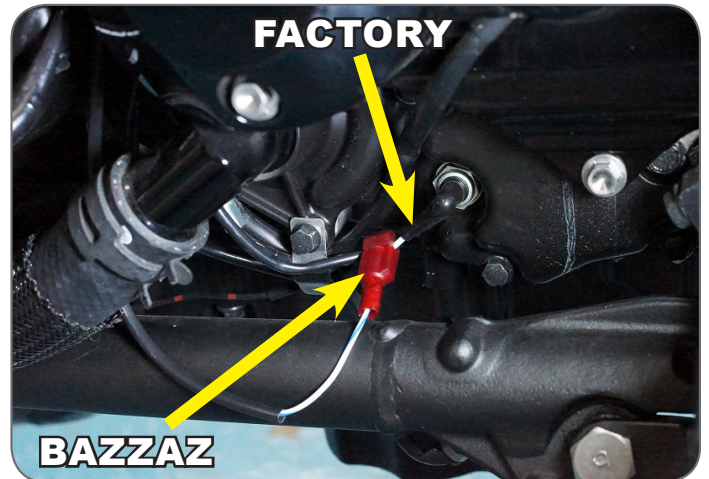

5.5


1. Locate the factory black three pin speed sensor connector, which can be found on the left hand side of the bike.
2. Disconnect the factory speed sensor connector and install the Bazzaz inline.

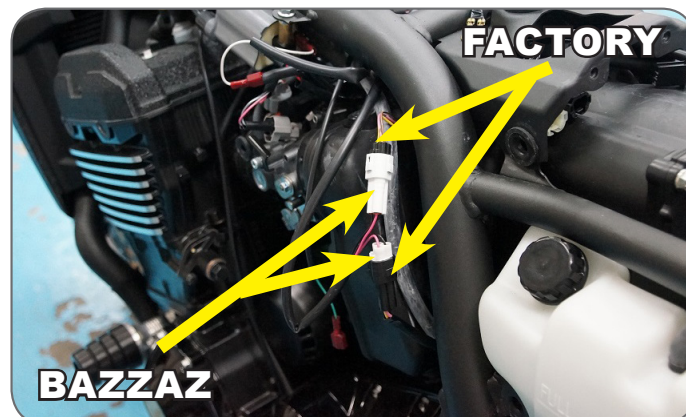

5>CONNECT (CONT.)

5.6

1. Route the white wires to the left hand side of the bike and the brown wires to the right hand side of the bike.
2. Disconnect the factory coil terminal.
****DO NOT DISCONNECT THE GREEN TERMINAL****
3. Install the Bazzaz coil connector inline.

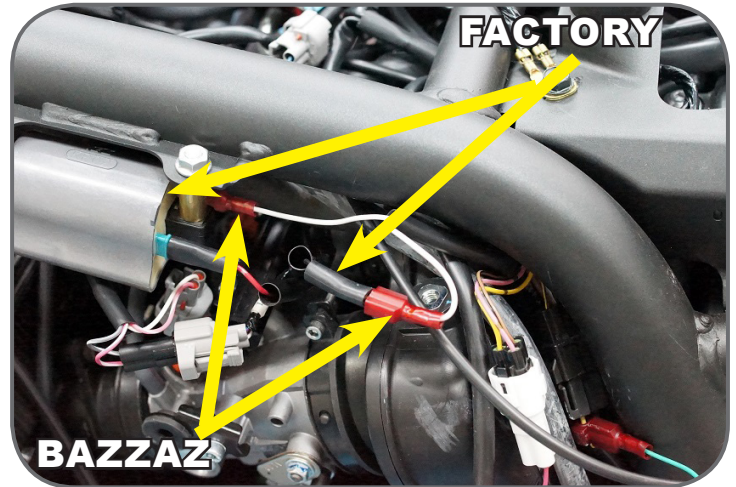

6>QUICKSHIFT

1. Measure and note your shift pedal height so you may reposition the shift pedal once complete.
2. Remove the factory shift rod and begin to install the Bazzaz shift switch using one of the supplied allen stud bolts and tighten.
3. Begin to install the Bazzaz shift rod. Note: The shift rod may need to be cut to get your original shift pedal height
4. Ensure to retighten




8>SECURE



Use the supplied cable ties to secure the harness neatly along the routing path **free of any moving or hot components (which could cause damage or failure of the system).**

9>CHECK



1. In order to check that the system is installed correctly, download the Bazzaz Z-Fi Mapper software at bazzaz.net.
2. Plug the USB cable into the control unit and computer.
3. Locate and open the Z-Fi Mapper software.
4.  Check that the pre-programmed map matches the model of your bike on the fuel map page within the software. You can switch from map 1 to map 2 by unplugging the map select jumper on the Bazzaz fuel harness. Map 1 will be pre-programmed; depending on your model, there may be a pre-programmed map in the map 2 slot. If map 2 is blank, stock ECU settings are used. Make sure that the jumper is left plugged in or unplugged, depending on which map you choose.
5. Start the vehicle and begin to check that the following inputs read correctly on the fuel map page.
 - RPM - Make sure that the RPM is reading near what the vehicle is idling at.
 - GPS - The vehicle should read neutral (or whichever gear it is in). For motorcycles that use a Gear Position Sensor, the bike does not need to be running to do this. For motorcycles that use a speed sensor, the wheel must be spinning to read gear properly. This can be checked on a dynamometer or by using a rear stand. Use caution when testing componentry.
 - TPS - When throttle is applied, the TPS should read accordingly. Fly-by-wire models must be running to check TPS. Normal cable operated throttles can be checked with just the key on, not running.

Also use software to:

- View and/or make adjustments to fuel maps
- Activate Z-AFM self mapper (sold separately)
- Save and load new fuel maps
- Re-calibrate throttle position sensor after throttle modifications
- View diagnostics for troubleshooting
- Change quickshift settings
- Make traction control adjustments



If any problem is found, please carefully follow through the installation steps again.



If problem still persists, please contact Bazzaz tech support

- Factory support is available in the US at 909-597-8300.
- For fastest support outside of the US, find your local importer at bazzaz.net

10>REINSTALL

After it is determined that everything is correct, reinstall the components removed in step 3.

11>USE

MAPS


The Bazzaz controller is capable of storing two maps.

Switch maps by connecting or disconnecting the map select jumper supplied with the kit.

Or use the optional handlebar-mounted switch to switch maps on the fly (sold separately).



MAP 1

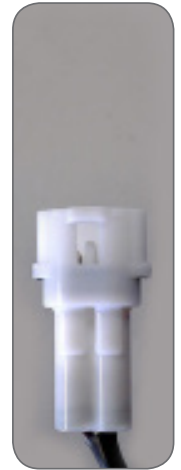

MAP 2

12>NEXT LEVEL

****Accessories purchased separately.**

SHIFT LIGHT (Sold Separately)

Illuminates white to identify pre-determined, optimal shift points.

Used to improve forward drive and momentum for faster drag passes and lap times.

Comes pre-programmed with suggested values that can be easily adjusted as desired.

*For use with the QS4 USB stand-alone quick shift only.



\$129.99



THE SMARTEST PERFORMANCE TUNING TECHNOLOGY



Proudly made in the
United States

Q4417